


## Settings for Essilor AKR550/750:

Press **Setup** switch under the LCD monitor and display the setup screen.

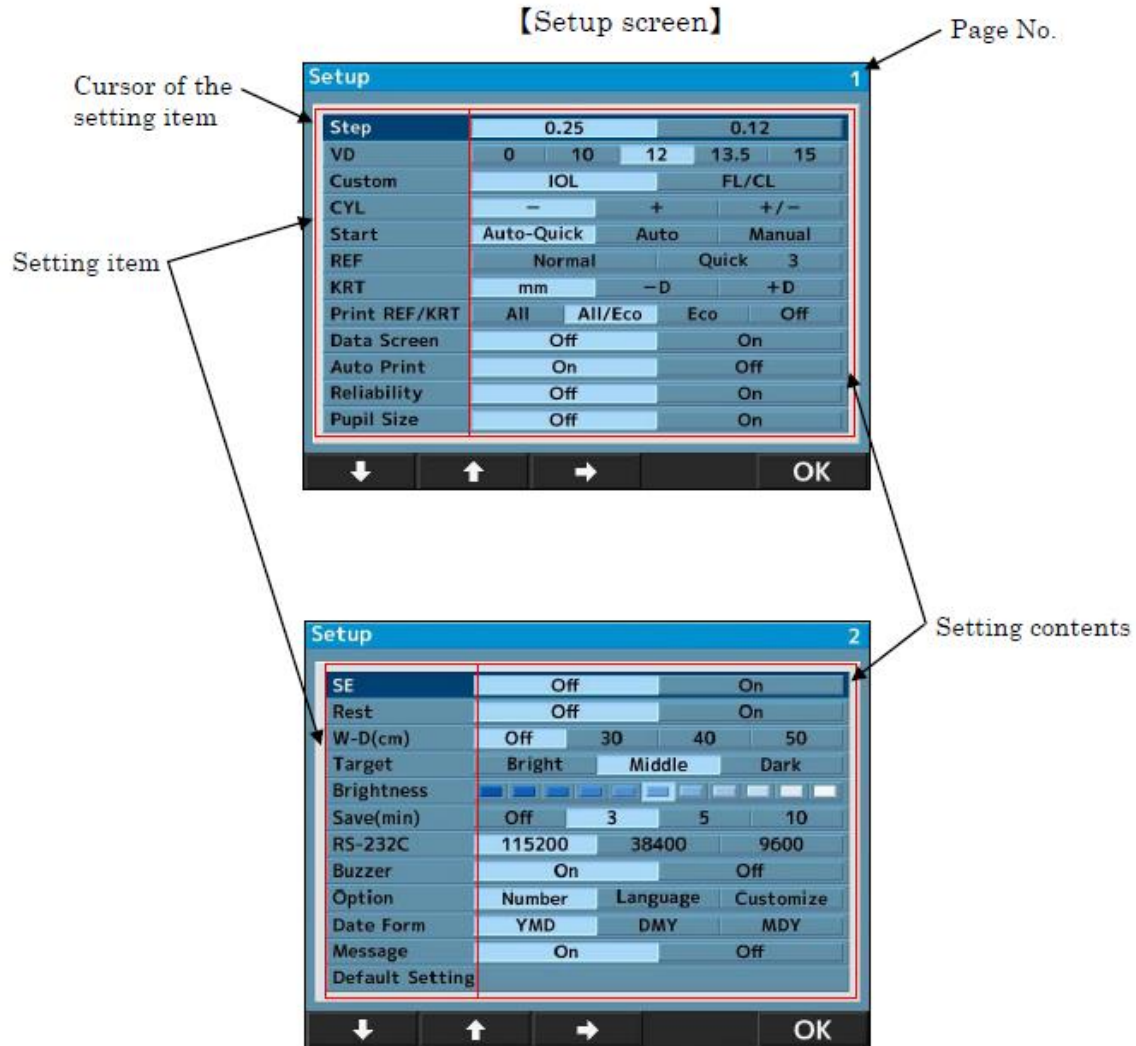

There are 24 setting items on the menu screen.


Select the item to be changed by pressing **↓** or **↑** and change it by pressing **→**.  
After changing it, return to the measurement screen by pressing **OK**.

On Page 1: Print REF/KRT: All/Eco or Eco


On Page 2: RS-232C: 115200


## 7.8 Output

【Connection: RS-232C】

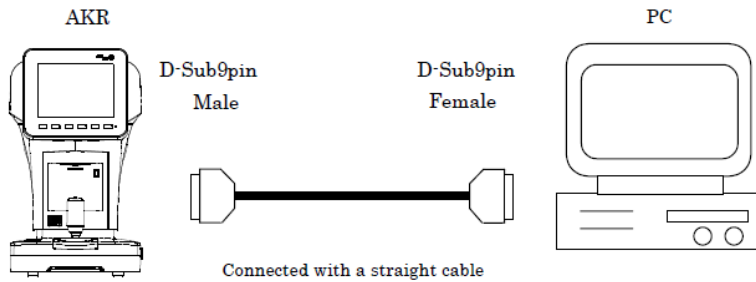

【Connecting Diagram: RS-232C】

 

  Use the shielded line to protect the output data from noise.

※ Contact your local distributor about the details of the operation, the connection, the output data.

### 【COM Port Output Setting】

-In case of using RS-232C-

When deciding the transmission speed, select BAUDRATE and select one from the list below for RS-232C.

Selectable BAUDRATE	Standard Setting
115200bps	○
38400bps	
9600bps	



For RS-232C, CHARACTER (bit number), PARITY (check of the forwarded data), STOPBIT (finish code) cannot be changed from initialization number, CHARACTER (8), PARITY (NONE), STOP BIT (1).

-In case of using USB-

When using USB, the output mode cannot be changed.

(Initial setting is BAUDRATE (921600), CHARACTER (8), PARITY (NONE), STOP BIT (1))



When using USB, need a specific device driver.  
Contact your local distributor about the specific device driver.