



Righton Speedy-K2 Machine Settings

1. Enter the setup menu

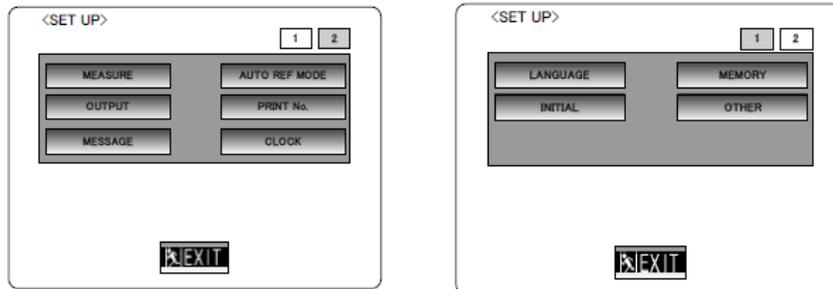


2. Go to the Output Menu

- In the Print Menu, make sure AUTO is set to Print & Send or Send

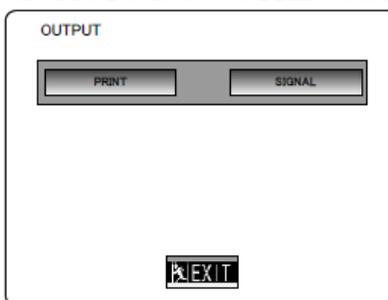

3. Choose the Signal Output Settings

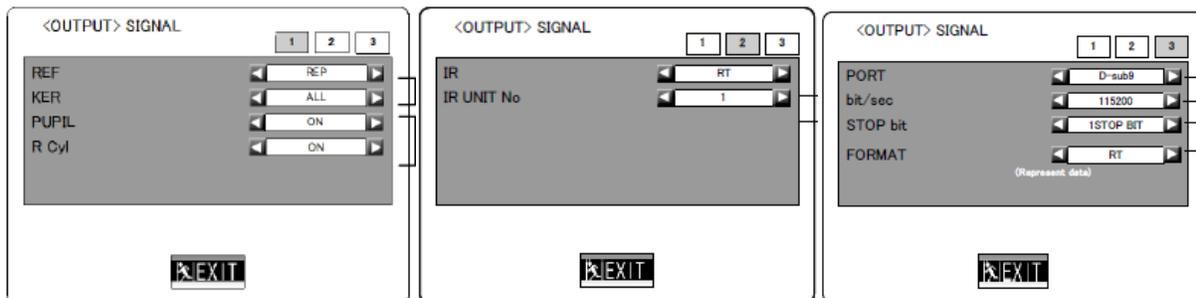

Apply the following settings:

Page 1:	Change all output signals to ALL and/or ON
Page 2:	Does not apply
Page 3:	Port: D-Sub9
	Bit/sec: 9600
	STOP bit: 1STOP BIT
	FORMAT: PC(CSV)