Getting to menus –
CL-100 and CL-200
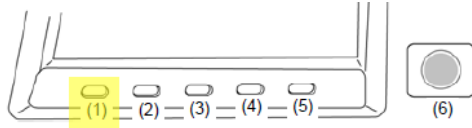
(1) Mode buttons   Pressed to change the mode, and when pressed;
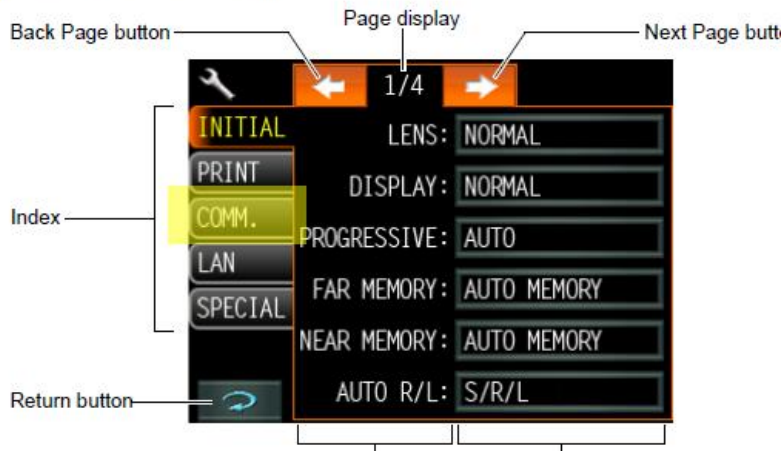
| MENU | PROG | TM-1 | | EXIT |

→ Returns to the initial state.
→ Pressed on to connect the spectral transmittance meter (optional).
→ if a progressive lens is known, this begins the far vision power measurement.
→ brings the Menu screen.
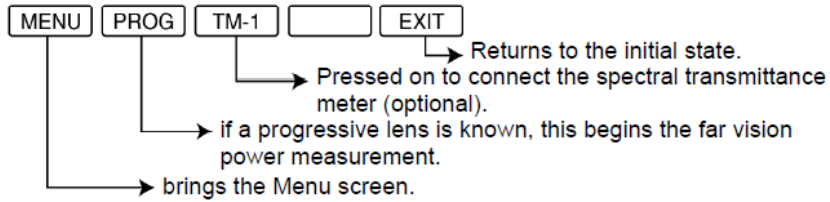
CL-300

SETTINGS button

The SETUP screen is displayed.

Back Page button   Page display   Next Page butt

Index

Return button

	1/4	
INITIAL	LENS:	NORMAL
PRINT	DISPLAY:	NORMAL
COMM.	PROGRESSIVE:	AUTO
LAN		
	FAR MEMORY:	AUTO MEMORY
SPECIAL	NEAR MEMORY:	AUTO MEMORY
	AUTO R/L:	S/R/L

RS- 232c setting typically needs to be on Old.